

# 24234, 24235, 24235B BASKETBALL / NETBALL TOWER INSTALLATION


1. LOCATION:- Determine Position - Refer to court size and line marking

2. FOOTING (HOLE) SIZE:- Depends on local conditions and is determined after soil testing has been completed. Consult your engineer. The following sizes are to be used as a guide only.

Normal: 600 x 600 x 1200mm Deep  
 Very Hard & Rocky Ground: 400 x 400 x 1200mm Deep  
 Soft, Sandy, Wet, Unstable: 1200 x 1200 x 1200mm Deep

3. Position post or post & sleeve in hole. Fit sleeve shroud over post & tape to post approx. 1m high, for slip ring. Ensure post is vertical & add concrete.

4. When concrete is cured, fit tower head (with slip ring). Assemble board, ring and starbracket together on the ground. Slide the assembly into tower head & lock up with 2 x 12mm fixing bolts. When satisfied board, post etc. is level, drill 12.5mm hole through star bracket & fit 12mm bolt and nylock nut.

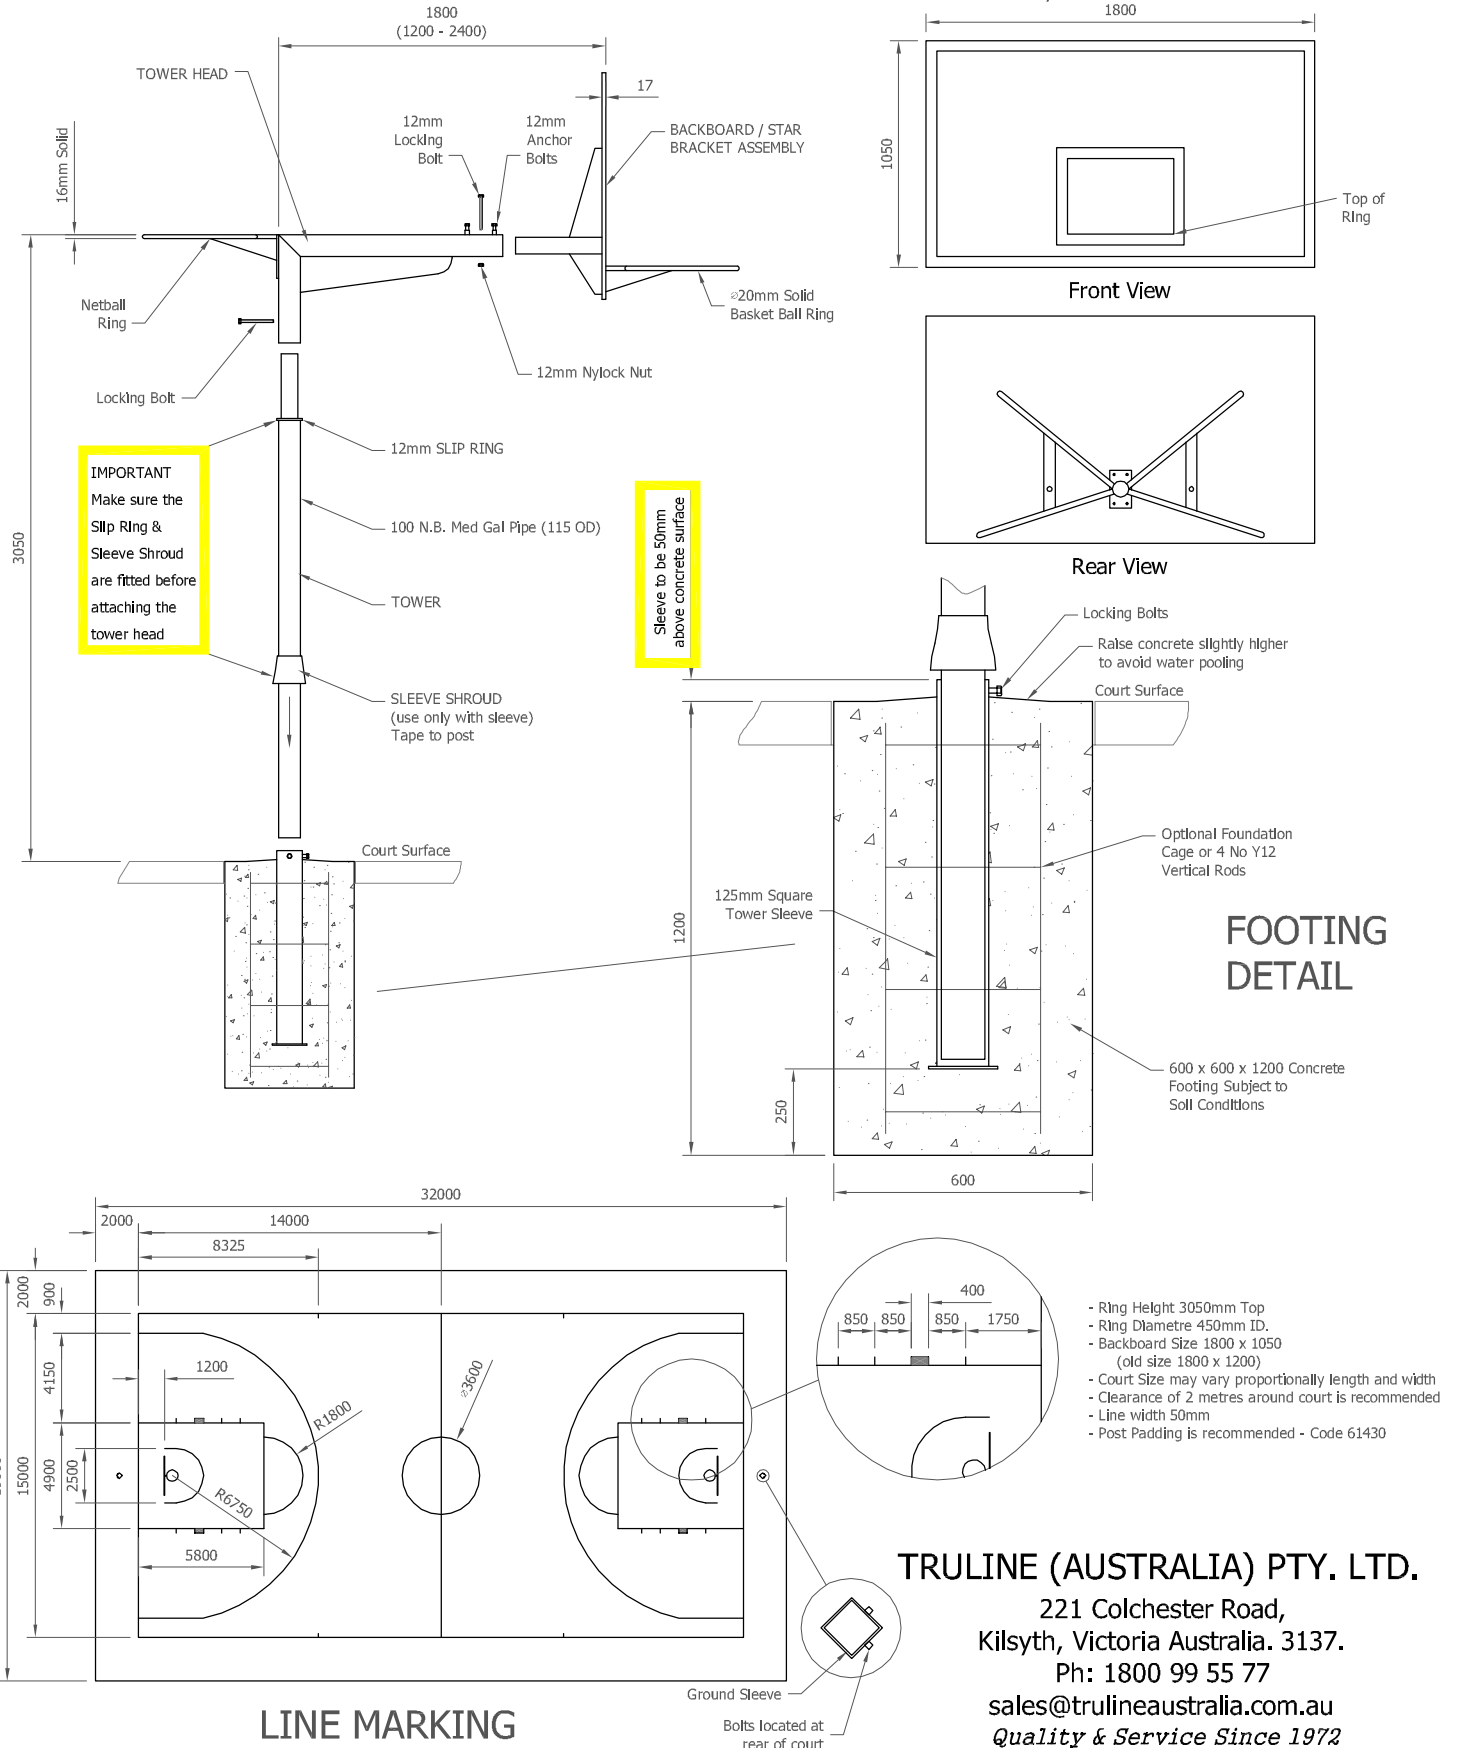

LINE MARKING

FOOTING DETAIL

TRULINE (AUSTRALIA) PTY. LTD.

221 Colchester Road,  
 Kilsyth, Victoria Australia. 3137.

Ph: 1800 99 55 77

sales@trulineaustralia.com.au

Quality & Service Since 1972